

# INSTALLATION GUIDE


## NAVURBAN WALL™

NAVURBAN Wall™ is a specially designed wallpaper product with an advanced and durable surface finish. Designed from the acclaimed NAVURBAN Diamond™ finishes with a wallpaper-lined backing. NAVURBAN Wall™ offers consistent grain structure and tones across wallpaper rolls. Scratch and abrasion resistant, as well as UV, stain and water resistant offering the ultimate surface finish.


### Tools Required:

- Duster
- Tape Measure
- Pencil
- Snap off knife with spare blades
- Drop Sheet
- Appropriate step ladder
- Wallpaper Table
- 75mm Paint Brush
- 2 Litre Pot
- Laser Plumb/Level
- Roller Tray
- Roller Frame
- Roller Sleeve with medium nap
- Roller Pole
- Roman Pro-880 Ultra® Clear Strippable Wallcovering Adhesive
- Plastic Smoother/Spatula
- 75mm metal scraper for detail trimming
- Clean Sponge
- Water Bucket


### The Installation Process:




**Surface Preparation:**  
Apply plaster wall to the selected space. Ensure the surface is dry and clean from any dust.




**Planning & Measuring:**  
Measure the width of the wall and determine quantity of roll drops required.  
\*For even number of drops, mark the centre line of the wall and work outwards to left and right.  
\*For odd number of drops, make the centre line of the wall, measure 300mm of each side of the middle line to ensure a centred first drop. From the centre drop, work outwards to the left and right.




**Cutting & Wallpaper Preparation:**  
Measure wall height and add a 10cm extra margin (5cm for the top and 5cm for the bottom) to allow for additional trimming once wallpaper is secured in place.  
Cut lengths using a sharp blade, changing the blade regularly.  
Lay measured lengths on a clean, dry surface and avoid any folds or creases within the wallpaper.  
\*NAVURBAN Wall™ doesn't require overnight flattening and is supplied pre-finished ready for application.




**'Paste the Wall' Application:**  
Mark the desired dimensions where glue is required. Apply glue evenly to marked areas for the width of the first roll. Allow a slightly wider application to avoid cutting-in the next roll with glue.




**Applying Drop Lengths:**  
Utilise a laser level to guarantee the initial set-up positioning of the wallpaper is exactly straight. Ensure to keep the laser light turned on throughout the entirety of application for perfect lines.  
\*Mid to dark colours of Navurban Wall™ may require double cut installation technique to minimise the visibility of the white backing edges.




**Smoothing:**  
Once wallpaper is applied, use a smoother tool to remove bubbles and complete the smooth surface  
\*Please provide cautious care to not damage the surface.




**Refining:**  
At the skirting and ceiling ends, make a crease with a smoother tool prior to cutting. Cut finishes whilst refreshing blade frequently. After the application of each length, use a soft dampened cloth with warm water to wipe down each length.

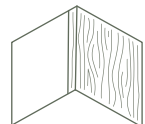

**Adjacent Wall/Corners:**  
If completing two adjacent walls, the first wall must ensure a small overlap within the corner edge to avoid cutting the edge.  
On the second wall, the edge laid will be straight from the roll to avoid an imperfect cut.  
If the inside corner is not aligned, it may be necessary to dry trim the first length to the exact width and hang using the laser light so that it is straight.

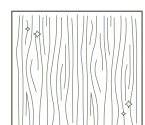

**Cleaning & Maintenance:**  
NAVURBAN Wall™ surface is easy to clean using a cloth dampened with warm water and detergent. As the surface is pre-finish no additional coating or upkeep is required.

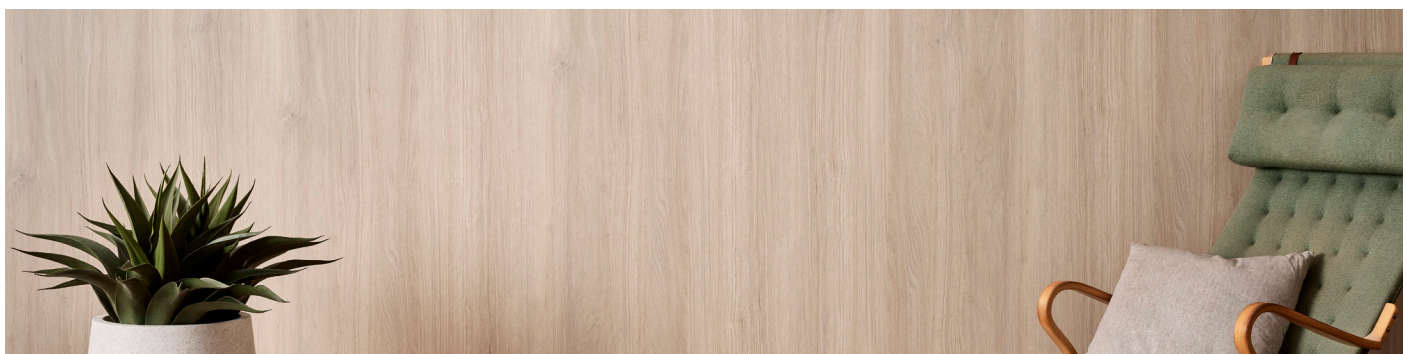

See installation video on our website: [newageveneers.com.au/navurbanwall/](http://newageveneers.com.au/navurbanwall/)

Unit 11/22-24 Beaumont Road,  
Mount Kuring-Gai, NSW, 2080 Australia

P: 02 9457 9622  
E: [reception@newageveneers.com.au](mailto:reception@newageveneers.com.au)

ABN: 85002707502  
[newageveneers.com.au](http://newageveneers.com.au)